

ION Science MiniPID 2 Sensor Guide





About ION Science

What we do

ION Science is a leading UK manufacturer of gas detectors and sensors. Our patented, humidity resistant PID sensor technology is trusted by major global gas detection manufacturers for the fast, accurate detection of volatile organic compounds (VOCs).

Applications

Our sensors are designed for use across a wide number of industries and applications, wherever you have a need to detect gases and vapours, including:

Industries

- Oil & gas
- Petrochemical
- Pharmaceutical and medical
- Food & beverage
- Universities & laboratories
- Government & defence
- Manufacturing
- Semiconductors
- Construction
- Aerospace
- Water

Applications

- Air Quality
- Fence line monitoring
- Fugitive monitoring
- Industrial health and safety
- HVAC & Building Control
- Semi-conductor
- Leak detection
- Power storage
- Solar farms
- Li-ion battery monitoring
- Site investigation
- Fertility & Clandestine labs
- Emergency response
- Fracking
- Decontamination

Our commitment to you

We are committed to developing and manufacturing the best performing sensors to give you the most accurate and reliable measurements. This is backed by an unrivalled level of customer service and support. By bringing critical component manufacturing under our roof, we offer the best quality in the market whilst remaining price competitive.

OEM Gas Sensors Volatile Organic Compounds (VOCs)

Why use a VOC sensor?

VOCs are a wide range of naturally and synthetically occurring chemicals which are found almost everywhere. They are described as volatile because they evaporate at temperatures found on Earth, releasing molecules into the atmosphere. VOCs are extremely useful for mankind, they form the building blocks of many synthetic materials (plastics, rubbers, glues, paints etc.), used to create pharmaceuticals and are a great fuel for transport and heating.

Whilst many VOCs have no adverse effects on health and the environment, some are harmful. Short term exposure health effects include eye, nose and throat irritation. Long-term exposure, to very low concentrations you are not aware of, may damage the liver, kidneys, central nervous system, and cause cancers. Therefore, accurate sensing of VOCs is critical for protecting people, the environment and optimising industrial processes.

Why use photo-ionisation detection (PID)?

VOCs can be measured in air using a variety of principles; however, some are cross sensitive to common atmospheric gasses including CO_2 , CO, SO_x , NO_x and water vapour at ppb levels. PID is not sensitive to these and is recognised as the most accurate method for VOC detection. The key advantage of the ION Science PID sensor is its world leading humidity resistance and long-term stability. In addition, it offers the best temperature stability on the market.




Principle of PID Photoionisation Detection (PID)

Principle of PID

Photoionisation is produced by the absorption of a high energy photon by a molecule. If the energy of the photon is greater than the ionisation energy of the molecule it will be ionised. Ions are detected at a pair of electrodes where changing current is proportion to concentration.

The figure below shows how an Ion PID sensor works. A miniature UV lamp generates high energy photons, which pass through the lamp window into the ionisation/detection chamber. Sample gas diffuses through a membrane on the opposite side.

The inset on the lower right shows what happens on a molecular level. When a photon with enough energy strikes a molecule M, an electron (e⁻) is ejected. The M⁺ ion travels to the cathode and the electron (e⁻) travels to the anode, resulting in a current. This current is proportional to the gas concentration. The electrical current can be displayed as a ppm or ppb concentration. Not all molecules can be ionized and the major components of air, i.e., nitrogen, oxygen, carbon dioxide, argon, etc., do not cause a response, but most VOCs do give a response.

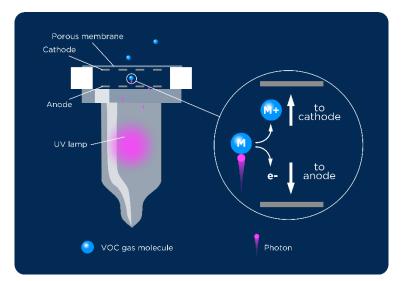

What PID to choose

Which sensor to choose?


We offer a range of PID sensors to offer the best solution for your application. The choice of PID begins with the gas you want to detect.

For successful detection of VOCs by PID the following guidelines are useful to follow:

- Less than 10 carbon atoms
- Have boiling point of less than 250°C.
- Have a vapour pressure greater than 4.0 x 10⁻⁵ mBar

If your target gas meets these criteria the next step is decide what energy (eV) sensor you require. ION Science have three energy sensors: 11.7, 10.6 and 10.0 eV. The 11.7 sensor detects the most chemicals, 10.0 the least. If you are interested in only detecting VOCs with a lower ionisation energy a lower energy sensor will provide a level of selectivity. A common use of lower energy sensors is detecting aromatics, including BTEX. Aromatics have ionisation energies less than 10.0 eV and are commonly present with long chain hydrocarbons with higher ionisation energies.

12.3 IE Methane

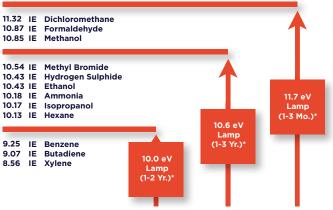

* expected lamp life subject to use and application

The next step of sensor choice depends on the concentration you want to measure, this is broadly divided into ppb or ppm measurement. We have 4 sensors for detecting ppb levels and 2 for ppm levels.

	MiniPID 2 PPM WR	Electrode Stack Colour Blue	Minimum Detection 500 ppb Limit	Range >10,000 ppm >	Response <3 Time T90 (S)	Sensitivity >0.4 mV/ppm >0 @ 100 ppm @
A REAL	MiniPID 2 PPM	Blue	100 ppb	>4,000 ppm	<3	>0.65 mV/ppm @ 100 ppm
A Constant	MiniPID 2 PPB WR	White	20 ppb	>200 ppm	8	>5 mV/ppm
A Constant	MiniPID 2 PPB	White	1 ppb	>40 ppm	8 ~	>30 mV/ppm
A Sector	MiniPID 2 HS	Red	0.5 ppb	>3 ppm	<12	>600 mV/ppm
A REAL	MiniPID 2 10.0 eV	White + Gold Spot	5 ppb	>100 ppm	8~	>15 mV/ppm
	MiniPID 2 11.7 eV	White	100 ppb	>100 ppm	8	>1 mV/ppm

Technical details

OEM gas sensors with state of the art sensing technology



Power and Signal

Supply Voltage (using internal regulator)

Supply Voltage (using a regulated power supply)

Current

20 - 32 mA (130 mA for 100 ms at start up) 100 mW at 3.3 V

0 - 3.2 V

0 to rail voltage - 0.1 V

3.6 - 18 V

(non intrinsically safe 10-18 V)

3 - 3.6 V

Power Consumption

Output Signal (using internal regulator)

Output Signal (using a regulated power supply)

Environmental

Temperature Range

-40 to 65°C

Relative Humidity Range

0 - 99% RH, non-condensing

Lifetime

Sensor Expected Life

Lamp Life

>5 years


10.6 eV - 10,000 Hours

Sensor dimensions

Bottom view pins; Pin 1: Positive Supply Voltage

Pin 2: Sensor Output

Pin 3: OV Ground







TOP VIEW PPM, PPB, 10.0 & 11.7 eV Gas Sensor

Dimension in mm

Boards Evaluation and development boards

For rapid assessment and integration of MiniPIDs ION Science offers the Sensor Development Kit (SDK). The kit is comprised of two boards i) sensor pcb with removable gas hood and analogue outputs ii) integration board which supplies power to the sensor PCB and provides 4 – 20, RS 485 outputs and has a 4 – 20 input. PC software allows the SDK to operate any MiniPID 2 straight out of the box.

Sensor PCB

Dimensions

Weight

Nominal Volatage

Supply Cables

Flow Rate (max)

Pressure (max)

Operating Humidity

Operating Temperature

50mm x 62mm

40g (72g when fitted with hood & PID)

5 Vdc ± 500mV

0.5 to 1.5mm²

300 ml/min

<300mBar

0-99 % RH (non-condensing)

-20 °C to +60 °C

Integration PCB

Dimensions

Weight

Nominal Voltage

Typical Power

Supply Cables

Maximum Contact Load

Operating Humidity

Operating Temperature

99mm x 82mm

70g

12V to 30 Vdc ± 500mV

< 200mA when connected to a PID via the sensor board

0.5 to 1.5mm²

100 Vac / 2A

0-99 % RH (non-condensing)

-20 °C to +60 °C

Spares and repairs Additional accessories and replacement parts for your MiniPID 2

ION Science provide a wide range of accessories and replacement parts available for our gas sensors. Please see below;

Sensor accessories

- PID lamp cleaning kit; Used to clean the lamp within the MiniPID sensor to remove dirt, grease and grime from the lap window ensuring optimal performance.
- Sensor stack removal tool;

The PID sensor stack removal tool allows safe, easy removal of the stack from the PID sensor.

Sensor replacement parts

• Electrode stacks; We supply 4 different stacks for each variant of our MiniPID with a colour range of White, White + Gold, Blue & Red.

- Lamps; Replacement lamps specific to sensor voltage
- Lamp spring; The lamp spring ensures the lamp stays tightly coupled with the electrode stack.

For the full list of parts please contact; sensors@ionscience.com or visit ionscience.com/sensors-and-components/



ION Science Ltd (Head Office)

Our head office and manufacturing plant is located just outside of Cambridge in the UK. The Hive, Butts Lane, Fowlmere SG8 7SL E: sensors@ionscience.com T: +44 (0) 1763 208 503



ION Science Global Offices

We have International ION Science offices located in the USA (Texas), China (Shanghai), Germany (Mettmann), India (Bhuj), France (Cavalaire-sur-Mer) and Italy (Bologna).



